





3. Using thin HF wires ( inside wire of USB cable is recommend) to designated position. ( clock and Ground ). the wires should be twisted for cancelling EMI interference.

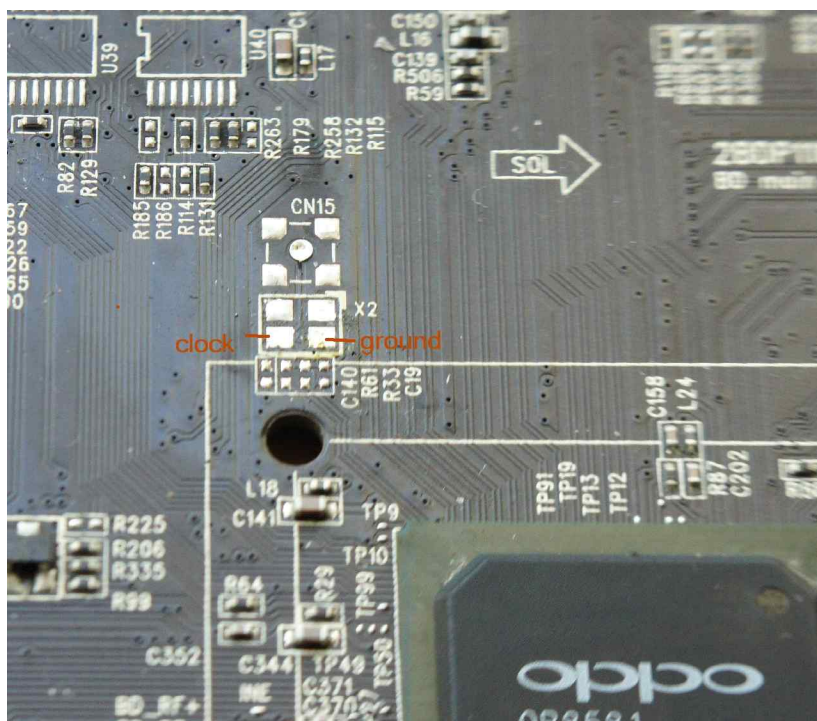

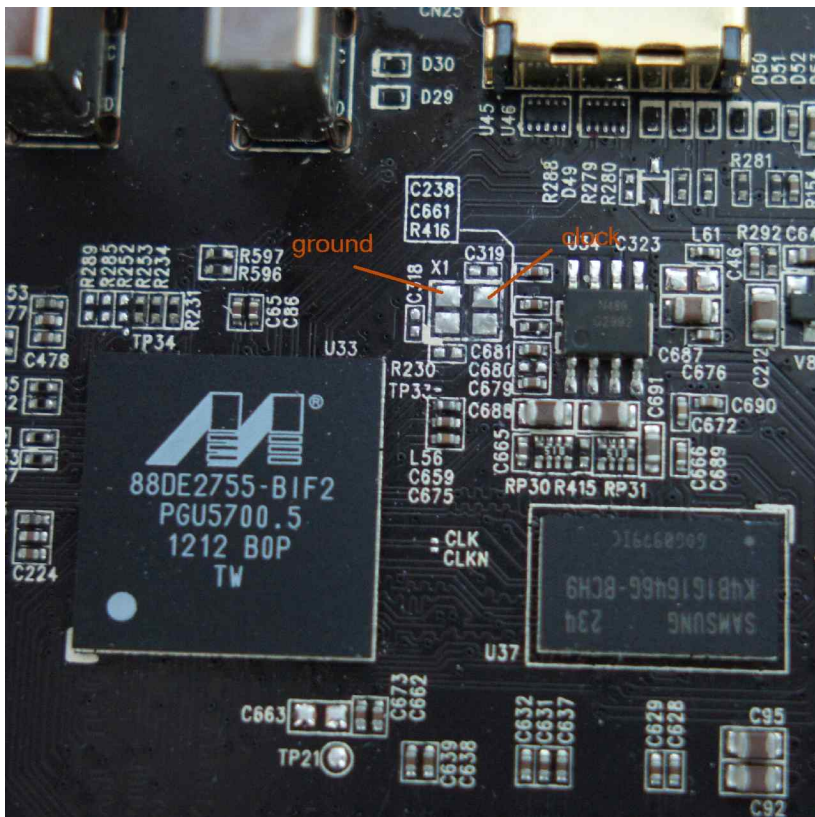

Get the DC power ( 6-8 V) from linear power module and connect to the input of TCXO module. the wires should be twisted as shown in picture.



